

PCN/NUS Nephrostomy Tube - Attaching a Drain Bag


1. Prepare drainage bag and connecting tubing




2. Insert drainage bag white adaptor into corrugated tubing




3. Close clamp on bottom of bag

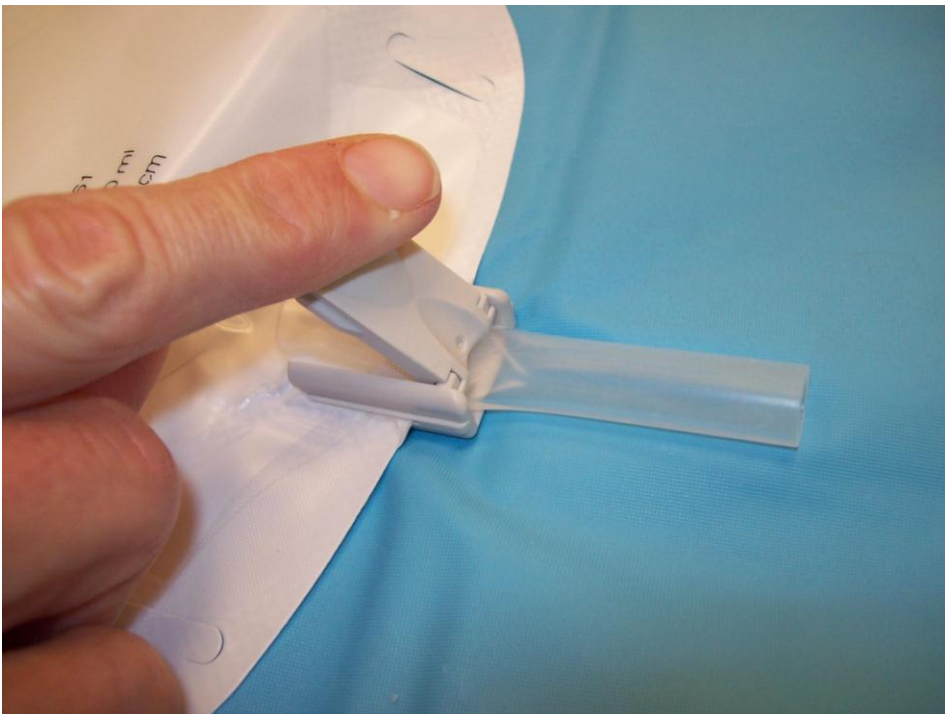


4. Connect connector tubing to white adaptor

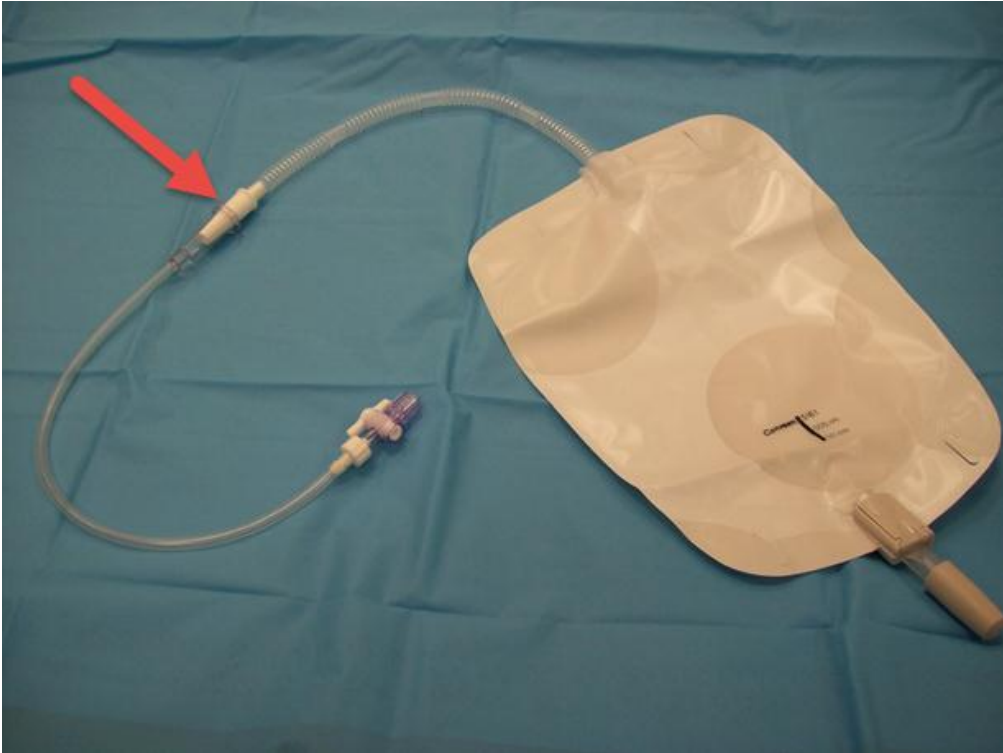


5. Connecting PCN/NUS tube to drainage bag

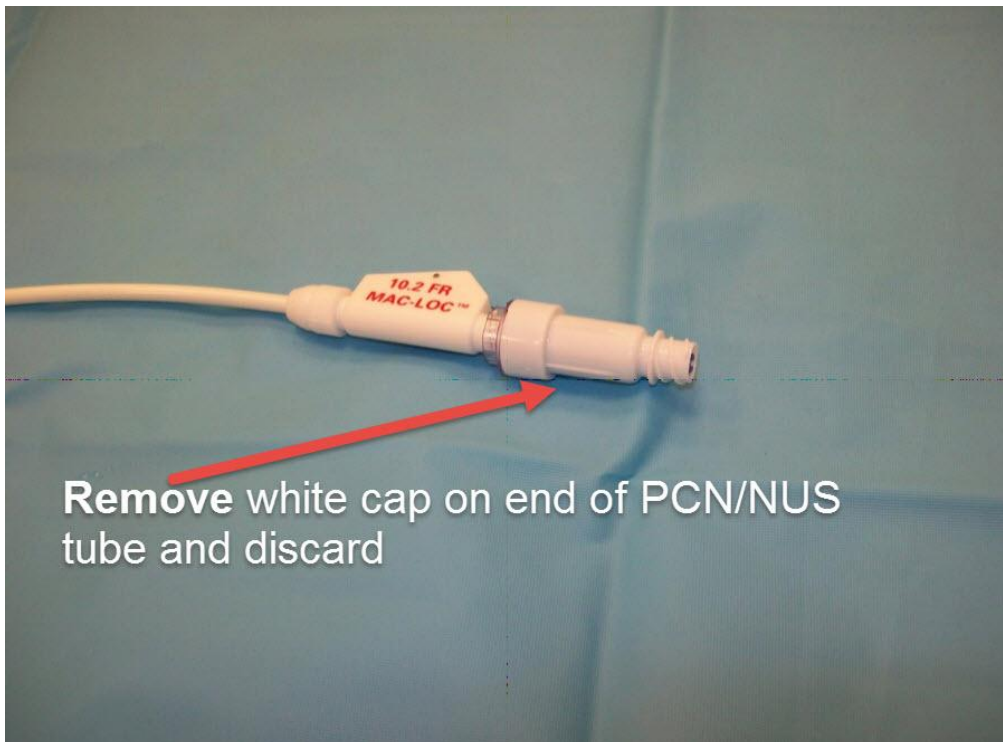


6. Remove (and discard) white cap before connecting drainage bag

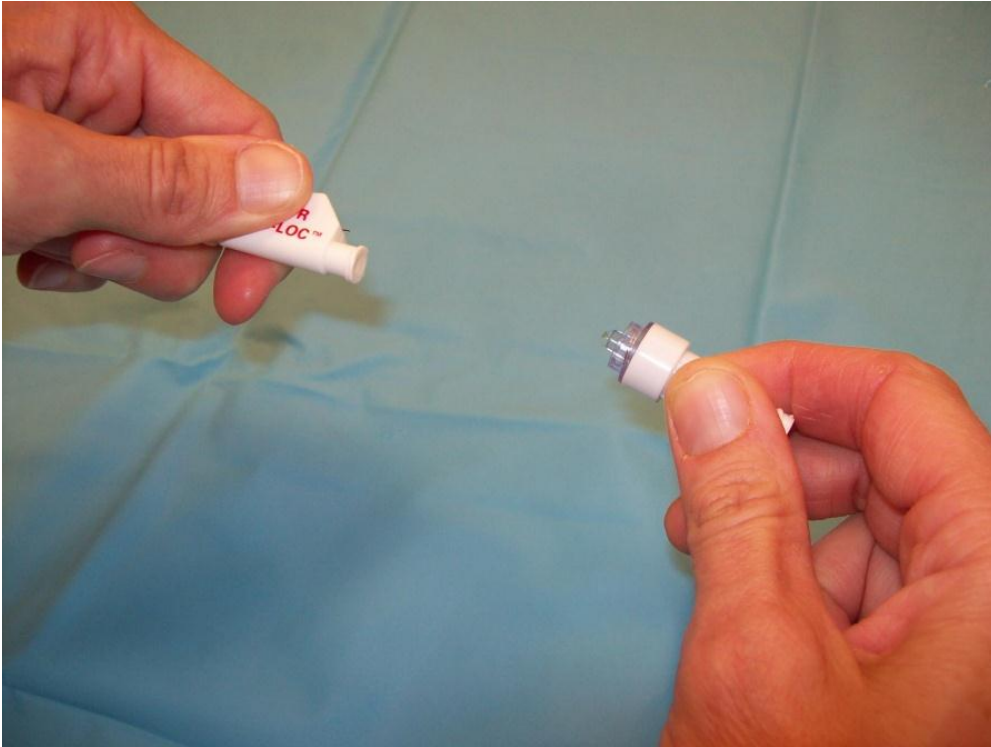

7. Connect tubing to PCN/NUS tube

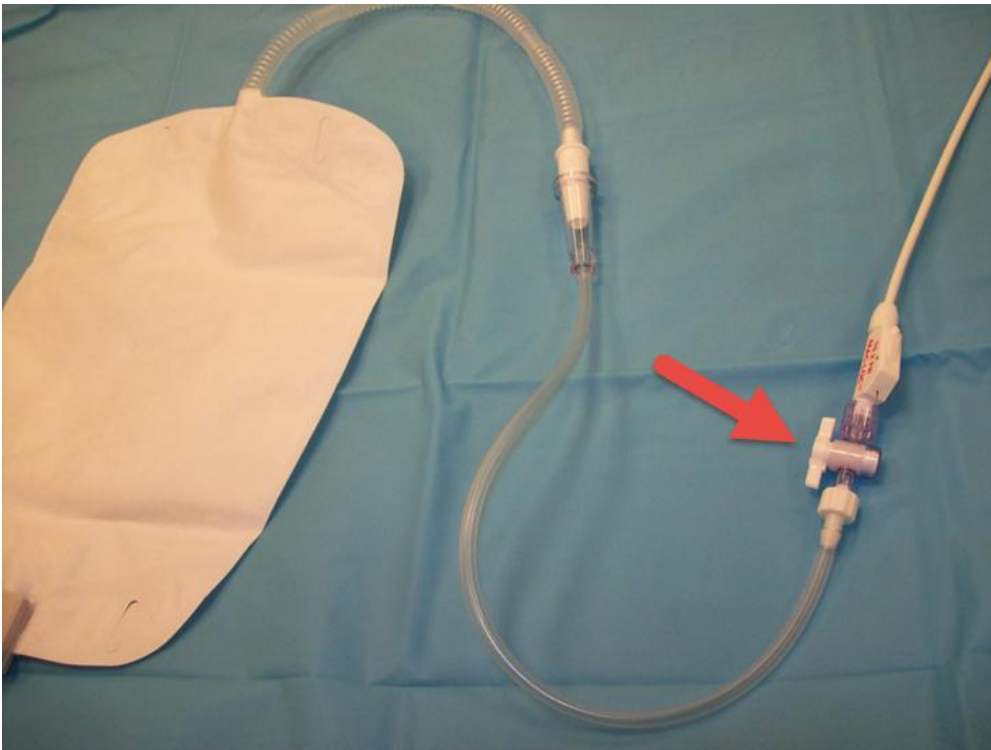

8. Ensure “stopcock” is open to drainage

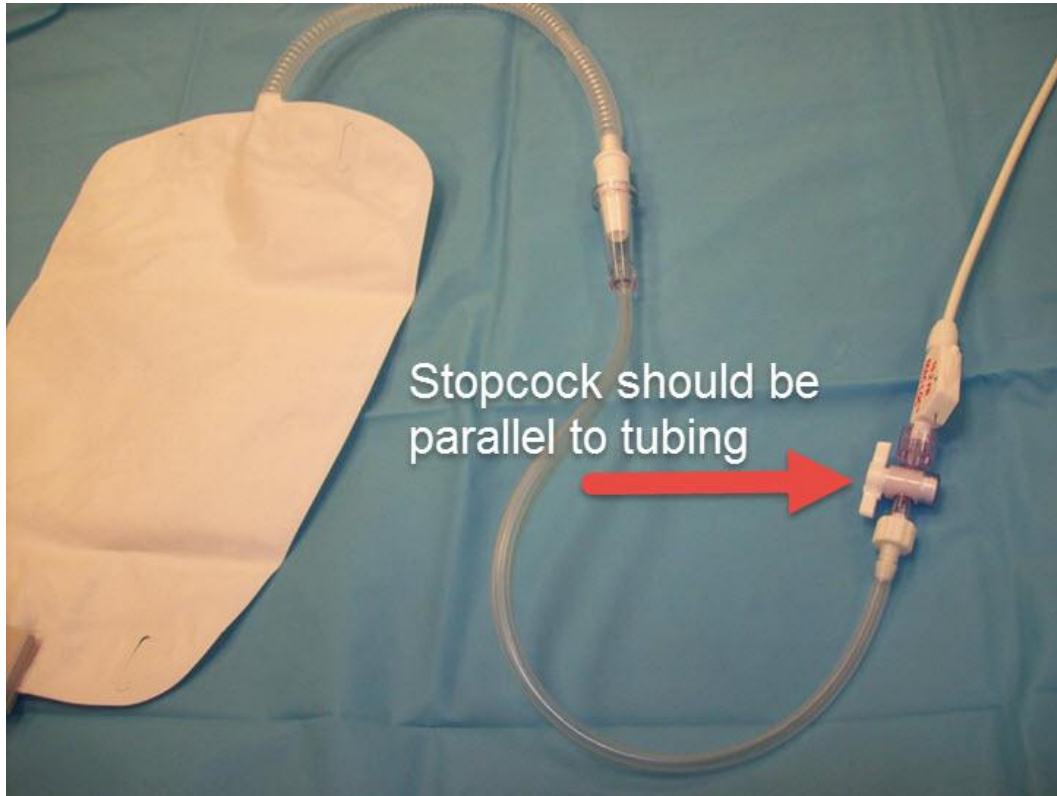

Disclaimer: This document contains information and/or instructional materials developed by the University of Michigan Health System (UMHS) for the typical patient with your condition. It may include links to online content that was not created by UMHS and for which UMHS does not assume responsibility. It does not replace medical advice from your health care provider because your experience may differ from that of the typical patient. Talk to your health care provider if you have any questions about this document, your condition or your treatment plan.

Patient Education by [University of Michigan Health System](#) is licensed under a [Creative Commons Attribution-NonCommercial-ShareAlike 3.0 Unported License](#). Last Revised 4/29/2015